


# 36" SAFETY STEEL BARRIER

## INSTALLATION INSTRUCTIONS

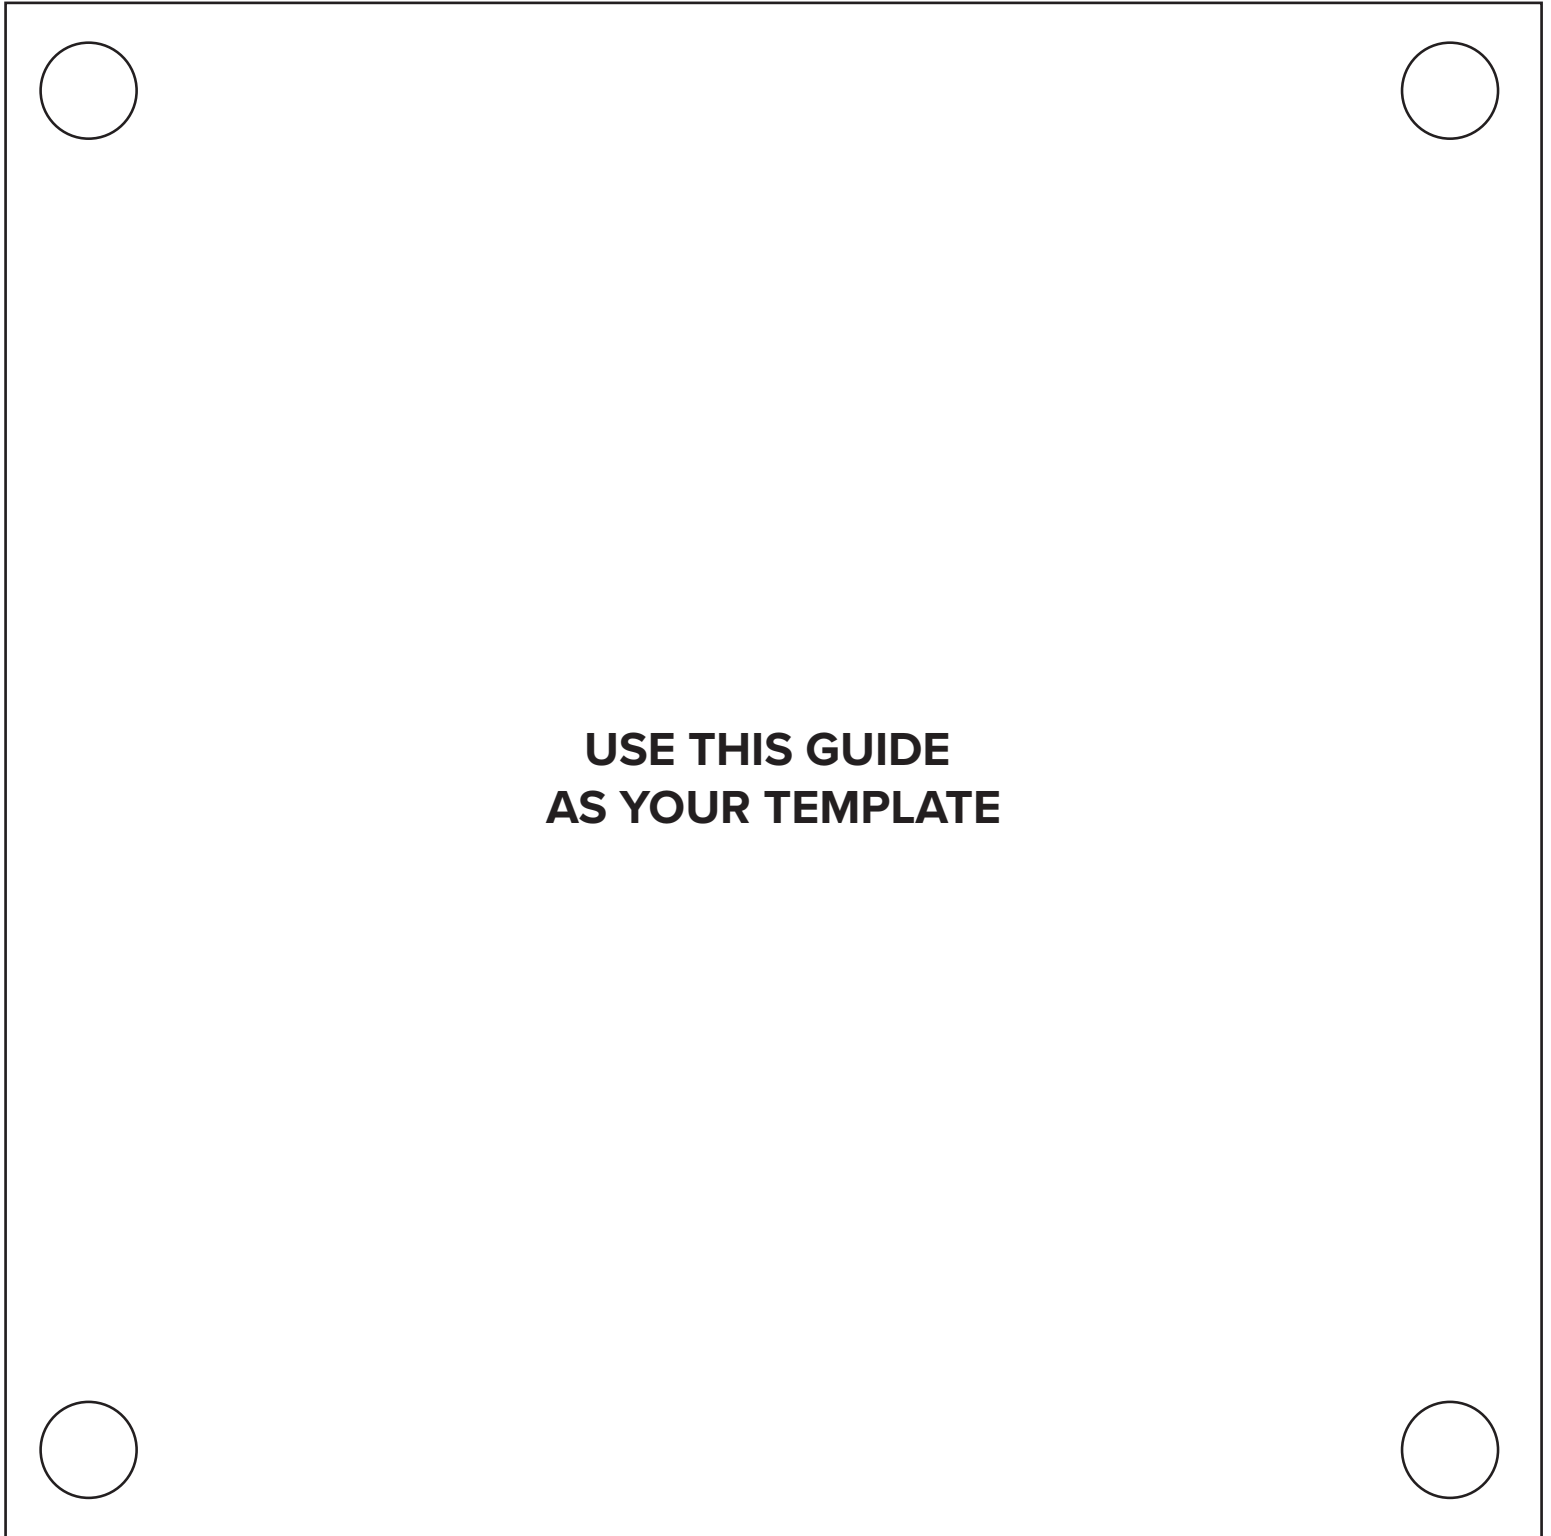

**USE THIS GUIDE  
AS YOUR TEMPLATE**

### HOW TO INSTALL

- Use template above to mark your holes
- Remove the template and drill marked holes 1/2" in diameter at least 3" deep into the floor
- Align the bollard over the drilled holes and secure with the anchor bolts.

### Tools Needed:

- Template
- Drill
- Anchor Bolts